

What to do if...

What to do if...



A tire punctures

P. 404 If you have a flat tire



The engine does not start

P. 413 If the engine will not start  
P. 77 Engine immobilizer system  
P. 417 If the vehicle battery is discharged



The shift lever cannot be moved out

P. 415 If the shift lever cannot be shifted from P



The engine coolant temperature gauge enters the red zone

P. 424 If your vehicle overheats



Steam can be seen coming from under the hood



The key is lost

P. 416 If you lose your keys



The battery runs out

P. 421 If the vehicle battery is discharged



The doors cannot be locked

P. 39 Doors



The horn begins to sound

P. 79 Alarm



The vehicle is stuck in mud or sand

P. 427 If the vehicle becomes stuck



The warning light or indicator light comes on

P. 383

If a warning light turns on or a warning buzzer sounds...



## nWarning lights



Brake system warning light

or



P. 383



Malfunction indicator lamp

or



P. 384



"ABS" warning light

or



P. 384



Driver's seat belt reminder light

P. 385



Front passenger's seat belt reminder light

P. 385



Low fuel level warning light

P. 385



Master warning light

P. 385



SRS warning light

P. 384



Electric power steering warning light

P. 384



Open door warning light

P. 385



Pre-collision system warning light

P. 384



Charging system warning light

P. 384



Tire pressure warning light

P. 385



The warning message is displayed

P. 392

If the warning message is displayed